

AUX MODE

- Keep the unit powered on. Plug one end of the 3.5 mm AUX cord to the headphone jack on your device;
- Plug the other end of the 3.5 mm AUX cord into the AUX jack on the speaker;
- It successfully joins into the AUX Mode along with AUX indicator lights up;
- Use the connected device's audio controls for music playback.

LOCAL MODE

The speaker is able to read lossless audio if audio files MP2/MP3/WMA/WAV/FLAC formats are in USB disk or micro SD card.

USB mode

Turn on the unit. Push USB disk with music files into USB port at the rear panel of speaker, it will switch to USB Playback Mode and then start to play music automatically.

Micro SD card mode

Push the micro SD card with music files into the micro SD card slot with the metal contacts facing down. The card will stick out of the slot about halfway. Waiting for a while, it will play music automatically.

CLOCK MODE


- Click "STANDBY" key on the speaker or "CLK" key on the remote control to access Clock Mode
- Press "NEXT" or "PREV" key to enter CLOCK SET MODE. Once in SET MODE the preference(CLOCK HOUR OR CLOCK MINUTE) you are currently setting will blink on the screen.
- To adjust the currently selected (flashing) item, press and release the "VOL+" or "VOL-" buttons (press and hold to fast adjust).
- Press "MODE" Key on the speaker or "PLAY/PAUSE" key on the remote control to complete setting.
- Click "STANDBY" key on the speaker or "CLK" key on the remote to exit clock mode.

PACKAGE CONTENTS

1x Tower Speaker	1x 3.5mm AUX Cable	1x Instruction Manual
1x Remote Control	1x Power Adapter & AC cable	

FM MODE

- On your remote control press FM key or on the speaker press the MODE key for a short time and let go, repeat this until FM Mode is selected;
- Short press the PLAY/PAUSE key on the speaker or AP key on the remote control, the available stations will be auto searched. It takes a while for processing. Press again to discontinue and store searched stations;
- Press the "NEXT" or "PREV" key on the speaker or remote control to select a station;
- To delete the station, Long press the FM key on the remote control and then It will skip to next available station.

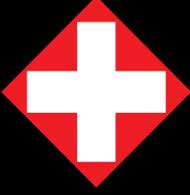swiss  go[®]

LIRA




INSTRUCTION MANUAL BLUETOOTH TOWER SPEAKER

TECHNICAL SPECIFICATIONS

1. Stereo sound, bass reflex, output power 120W
2. Supports MP3, WAV, WMA, FLAC audio files from a USB stick or SD / MMC card. Maximum capacity 64 Gb, maximum 8 folders within USB / SD.
3. Through the " Aux In " input using the audio cable you can play MP3 / MP4 / PC files ...
4. Cable + power adapter: 220-240V, 50 / 60Hz. DC 22V / 2.8A
5. 1 Speaker 1 "4 OHMS 10W (Treble), 4 speakers 2.75" 3 OHMS 15W (medium frequencies), 1 Speaker 6.5 "8 OHMS 50W (super bass).
6. Output Power: 120W
7. Remote control
8. Bluetooth function compatible with versions 4.0, 3.0, 2.1 + EDR
9. USB and Micro SD Reader
10. Auxiliary input function
11. Built-in FM Radio
12. Measures: 20 x 20 x 116 cm
13. Material: Wood
14. S / N Ratio: 98db
15. 3.5mm Audio Cable
16. Frequency Response: 20Hz - 20,000Hz
17. Built-in equalizer with sound effects


TOP PANEL DESCRIPTIONS

1. LED display - the symbols on screen show the main features of current working status
2. Long press – Power ON/OFF
Short press – Play/Pause
3. Skip to Previous Track
4. Standby (digital clock)
Click to access clock mode
5. Decrease Volume
6. Remote control receiver
7. Light –change between illuminating or breathing light mood and shut it off.
8. Skip to Next Track
9. Mode – audio source switching
10. Increase Volume

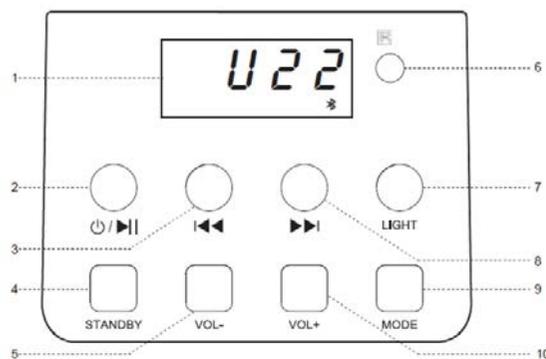

REMOTE CONTROL

1. Power ON/OFF
 2. VB – virtual bass on / off
 3. Short click - to access FM mode
Long click - delete the current station
 4. Long click - reset sound effect to default
Short click - click repeatedly switch between popular, classical, rock, jazz, country, HiFi and DSP(preset) sound effect in order
 5. Decrease Volume
 6. Clock mode – click to access clock mode
 7. Long click - fast backward
Short click - Skip to previous track
 8. Play/Pause
 9. Bluetooth Mode
 10. Local mode (USB and Micro SD card mode)
Short click "USB" key repeatedly to switch between USB mode and micro SD card mode
 11. LED – turn on / off the mood light
 12. RGB –short click to change the light color between blue, green, cyan, red, carmine, yellow, white
 13. Mute / Unmute volume
 14. Short click - to auto search and store the station
 15. Increase Volume
 16. Long click - fast forward / Short click - Skip to next track
 17. AUX Mode
 18. LTE - change between illuminating or breathing light effect
- Note: in breathing mood light, click and hold "RGB" key, the mood light colors will be auto switched cyclically.**

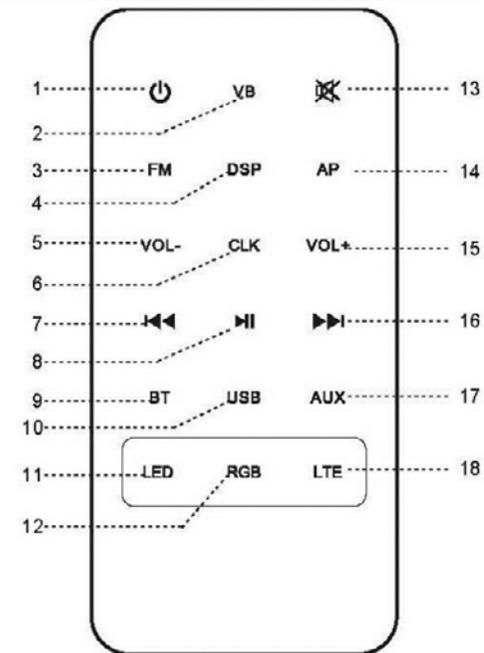

BACK PANEL DESCRIPTIONS

1. TF Card Slot
2. Line in Jack
3. USB Playback Port & USB 5V charging port for Android and Apple devices



BLUETOOTH MODE

- Turn on the speaker and then switch to Bluetooth Mode, the Bluetooth icon on the display will keep flashing
- Keep the speaker and Bluetooth enabled device within 20~30 feet or less of each other during pairing process. Different environments may affect the transmission distance;
- Set your mobile phone or the Bluetooth enabled device to search for Bluetooth devices;
- When the Bluetooth enabled finds the speaker, select "LIRA" from the list of found devices;
- If required, enter the password "0000". Select OK or YES to pair the two units;
- After a successful pairing, the Bluetooth icon will stop blinking